



INSTRUCTIONS AND GUIDELINES MANUAL

WWW.FIREWATERHOTTUBS.COM

Firewater Hot Tubs Inc.
Box 38059, Saskatoon, SK S7N 1H2

Website: www.firewaterhottubs.com
Phone: 306-514-2716

HOW TO SET UP MY FIREWATER HOT TUB



***PLACE ON FLAT LEVEL GROUND**

***CLOSE TO DECK OR BUILD DECK AROUND IT AFTERWARDS**

***NOT TOO CLOSE TO HOUSE (STOVE PIPE AT LEAST 10 FEET AWAY FROM HOUSE)**

***6 OR 7 RAILWAY TIES SPACED 4" MAX APART**

***12 OR 14 LANDSCAPE TIES SPACED 4" MAX EVENLY APART**

THIS ALLOWS THE OVERFLOW WATER TO RUN AWAY AND NOT MILDEW UNDER THE TUB (HIGH AND DRY)

***CAREFULLY SLIDE THE TUB ONTO THE BASE. THE METAL SLEEVES UNDER THE TUB HELP KEEP THE INSULATION IN. BE CAREFUL NOT TO CATCH THEM WHEN MOVING THE TUB AROUND!**

***INSTALL DRAIN (IF APPLICABLE) UNDER THE FENCE AREA
OF THE STOVE**

***A NICE HEIGHT FOR THE DECK IS ABOUT 24" SO THAT
GETTING IN THE TUB IS EASY (ONE FOOT ON THE DECK ONE
FOOT ON THE SEAT OF THE TUB)**

***A NICE HEIGHT FOR THE STOVE AREA IS ABOUT ONE FOOT
UP (ALLOWS EASY ACCESS TO THE FIRING AND CLEANING OF
THE STOVE)**

***IF POSSIBLE SLOPE THE TUB TOWARDS THE DRAIN SLIGHTLY
(ABOUT 1/2" LOWER NEAR THE DRAIN)**

***SILICONE THE JOINTS OF THE STOVE PIPE KEEPING RAIN
WATER OUT OF THE STOVE- THE ASHES AND WATER WILL
FORM A MILD ACID THAT WILL JUST CORRODE OUT THE
BOTTOM OF THE STOVE (NOT UNDER WARRANTY).**

**ALWAYS HAVE WATER IN THE TUB TO A MINIMUM OF 1"
OVER THE LOWER PART OF THE TOP OF THE STOVE
BEFORE LIGHTING THE FIRE.**

RAILWAY TIES UNDER TUB




LANDSCAPE TIES UNDER TUB



HOW TO FIRE UP A FIREWATER HOT TUB

- ✓ **ALWAYS FILL THE TUB WITH WATER BEFORE FIRING THE STOVE**
- ✓ **ALWAYS KEEP THE STOVE LID ON WHEN FIRE IS ON**
- ✓ **TO LIGHT THE FIRE USE LOTS OF NEWSPAPER AND KINDLING.**
- ✓ **AFTER KINDLING HAS CAUGHT PLACE 5 OR 6 SPLIT LOGS INTO FIRE BOX. ALWAYS RETURN STOVE LID (ADJUST THE 2" FLUE AIR OPENING TO CONTROL BURN) FULL OPEN WHEN STARTING, 3-5MM ONCE MAX TEMP IS REACHED, DEPENDING ON WOOD TYPE/CONDITION**
- ✓ **ABOUT EVERY 15 TO 20 MINUTES RESTOCK THE STOVE WITH SPLIT WOOD (A NICE HOT FIRE IN THE BOTTOM HALF OF THE STOVE)**
- ✓ **SPLASHING WATER ONTO THE FIREBOX LID WILL MAKE A SIZZLING NOISE (THIS MEANS THE STOVE IS WORKING PROPERLY) WATCH THE STOVE IS HOT!**
- ✓ **STIR THE WATER USING THE PADDLE OCCASIONALLY (THIS WILL KEEP THE WATER AT UNIFORM TEMPERATURE)**
- ✓ **IT WILL TAKE ABOUT 3 TO 4 HOURS TO BRING THE TEMP. UP TO 100 DEGREES F. PLUS (104 DEGREES F. IS MAX)**
- ✓ **CLOSE THE FIRE BOX LID (CLOSE AIR OPENING)**
- ✓ **ENJOY SAFE HOT TUBING**
- ✓ **DO NOT OVER LOAD THE TUB WITH PEOPLE (6 TO 8 IS LOTS) BECAUSE THE WATER LEVEL COULD GET TOO LOW AND IF THERE IS A FIRE ON IN THE STOVE A MELTDOWN COULD OCCUR !!!!!**

- ✓ **ALWAYS KEEP WATER LEVEL UP ABOVE (MINIMUM 1" ABOVE) THE LOWER PART OF THE STEPPED PORTION OF THE STOVE WHEN FIRING, THE WATER ALSO COOLS THE STOVE WHEN THE FIRE IS ON! BLUE LINE IS MINIMUM!**

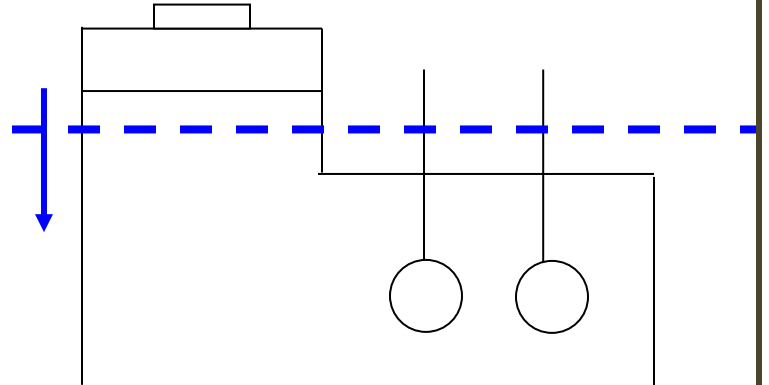

- ✓ **BEFORE DRAINING THE TUB MAKE SURE THE FIRE IS OUT AND STOVE IS COOLED!**
- ✓ **DRAIN WITH SUMP PUMP AS LOW AS POSSIBLE**
- ✓ **BAIL OR WET VAC OUT REMAINING WATER AND WIPE CLEAN WITH TOWEL**

RULES AND REGULATIONS

- 1. ALWAYS HAVE THE TUB FULL OF WATER WHEN THE STOVE IS FIRED... IF THE WATER LEVEL GETS TOO LOW THE TUB WILL MELT AND BURN !!!**
- 2. BE CAREFUL ENTERING AND EXITING THE TUB “THE DECKS ARE EXTREMELY SLIPPERY WHEN THEY ARE ICY”**
- 3. PLEASE LIMIT YOURSELVES TO 6 PEOPLE AT A TIME IN THE TUB. TAKE TURNS SOAKING. IF TOO MUCH WATER IS DISPLACED WHEN THE SOAKERS GET OUT A MELT DOWN COULD OCCUR.**
- 4. BE CAREFUL NOT TO TOUCH THE STOVEPIPE OR STOVE. IT CAN BE VERY HOT AND WILL BURN YOU BADLY.**
- 5. NO ALCOHOLIC BEVERAGES IN THE TUB...**
- 6. MAXIMUM WATER IS 104 DEGREES FAHRENHEIT, TOO MUCH HOT WATER IS HARD ON THE BODY. DO NOT USE THE TUB IF YOU ARE PREGNANT OR HAVE HEART PROBLEMS!!!**
- 7. BE CAREFUL AND RESPONSIBLE IN THE HOT TUB!**

DISCLAIMERS

Firewater Hot Tubs Inc. shall not be liable for loss of use of the Firewater Tub or other incidental or consequential damages. Under no circumstances shall Firewater Hot Tubs Inc. or any of its representatives be held liable for injury to any persons or damage to any property. Some provinces do not allow exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from province to province. Specifications subject to change without notice.



FIREWATER HOT TUBS INC.

WWW.FIREWATERHOTTUBS.COM

306-514-2716